

TECHNICAL DATA

max. transfer rate RS232
max. transfer rate RS485/RS422
max. FO length
connector FO Multi Mode
connector RS232/422/485
isolation RS422/RS485
selectable terminator
transfer mode

115 kb/s
3 Mb/s
1,7km on 62,5µm
ST duplex, 820nm
screw
1 kV
120 R
full duplex – RS232
half duplex – RS485
full duplex – RS422
„controlled RS422“
„four-wire RS485“
10-50V DC/ 9-34V AC
max 2.5 W
600W/1ms
600W/1ms
red PWR
yellow RxD
green TxD
permanent yellow LED

power supply
input power
overvoltage protection - RS485/RS422
overvoltage protection – power supply
optical indication (LED)

indication of interrupted fiber optic
(only for fiber optic logic – normal)
dimension

90 x 36 x 58mm



DIN serie

DIN 7.1/485

converter

RS 232/422/485 ↔ FO multi mode
isolated RS422/RS485

CONDITIONS OF WARRANTY



ComErgon Ltd. provides full warranty
of 24 month for serial interface module DIN 7.1/485
starting on the day of purchase.

The warranty is except for the cases in which the functioning of the module has been affected
by faulty manipulation, natural catastrophes or other external factors.

ver. 1.4


rev 1.0/2009



phone: +421-2-4488 9090
fax.: +421-2-4487 3525

Cachticka 23, 831 06 Bratislava
SLOVAK REPUBLIC

e-mail: service@comergon.sk
http: www.comergon.sk

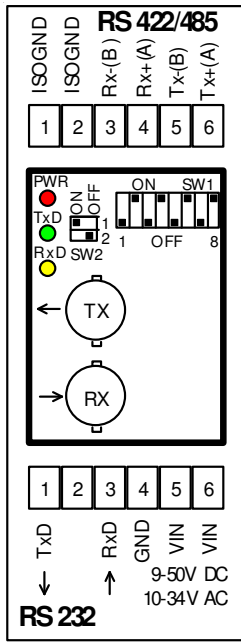

STANDARD SETTING

transfer mode

RS232 – full duplex

terminator receiver
hold line (pull-up, down)
fiber optic logic

RS485 – half duplex
120 R
ON
normal

Note – at the same time can be used RS422/RS485 or RS232

	POSITION	MODE	NOTE
SW1	1	NC	not connected
	2 OFF	mode RS422	
	2 ON	mode RS485	
	3 OFF	mode RS422	
	3 ON	mode RS485	
	4 OFF	RS422/485 -	
	4 ON	- terminator for receiver	120 R
	5 OFF	receiver hold line -	
	5 ON	- pull down	mode RS232
	6 OFF	receiver hold line -	
	6 ON	- pull up	mode RS232
	7 OFF	transmitter hold line -	
7 ON	- pull down		
8 OFF	transmitter hold line -		
8 ON	- pull up		
SW2	1 OFF	FO logic - normal	
	1 ON	FO logic - inverse	
	2 OFF	FO – RS485/422/232	standard
	2 ON *	repeater FO	echo on FO

Necessary setting - RS232

SW1 pos. 5, 6 -ON | SW2 pos. 2 -OFF

Recommended setting - RS485

SW1 pos. 7, 8 -OFF | SW1 pos. 2, 3, 4, 5, 6 -ON | SW2 pos. 2 -OFF

Recommended setting - RS422

SW1 pos. 2, 3 -OFF | SW1 pos. 4, 5, 6, 7, 8 -ON | SW2 pos. 2 -OFF

* when SW2 is ON converter works as repeater FO in mode simplex with monitoring on RS485, RS422, RS232.

In this case it is not possible to receive from RS485/RS422/RS232.